



tinout

## INSTALLATION INSTRUCTIONS

**1 Insert module:** Insert the SFP transceiver module (**printed side up**) and the rubber cap facing out.



**2 Remove rubber cap:** Remove the SFP transceiver module's rubber cap.



**3 Connect fiber cable:** Connect with fiber cable's LC connector to the SFP transceiver module's port.



**4 Connect other end:** Connect the other end of the cable to a like module in order to verify the fiber connection is complete.



# REMOVAL INSTRUCTIONS


- 1 Remove fiber cable:**  
Press the fiber cable's connector and pull to remove the fiber cable from the SFP transceiver module.



- 2 Pull bail latch:**  
To remove the SFP transceiver module, begin by pulling the module's bail latch.



- 3 Remove module:**  
Remove the SFP transceiver module.

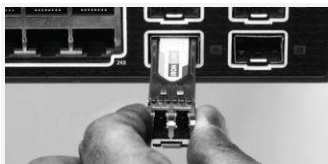

## NOTE

Always store your transceivers with the rubber cap inserted.

## SUPPORT

[coft@tinout.com](mailto:coft@tinout.com)

<http://www.tinout.com>

## Partners



10G MSA OPTICS  
COMPATIBILITY INFORMATION

Optical Ethernet Experts



RAISECOM

Comba

SUNWAVE  
三 维 网 络

D-Link

FEIXUN